


PLAN VIEW

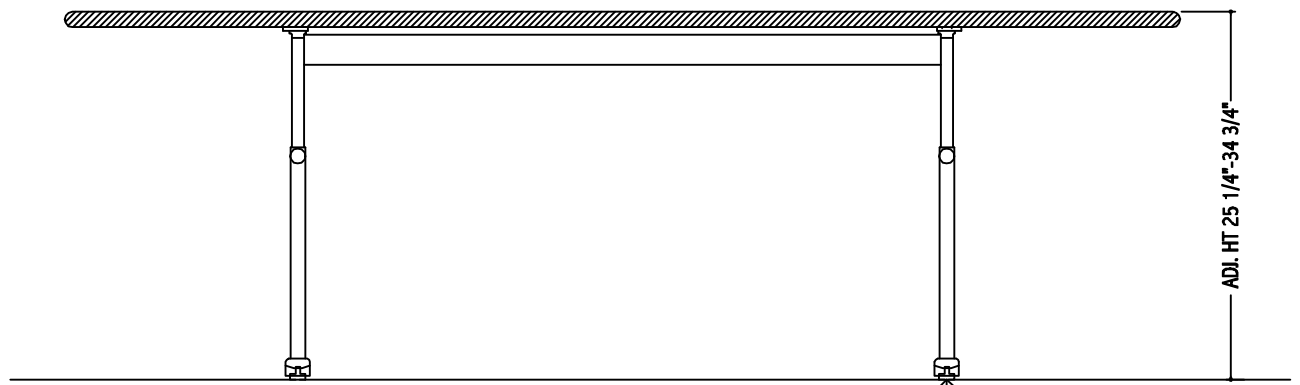

ELEVATION

SIS MANUAL ADJUST BASE